


Quick Start Guide

POLYTUNE 3

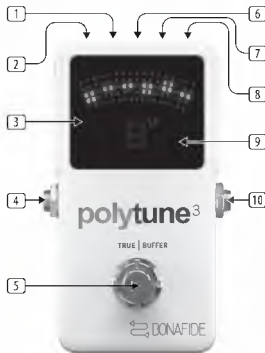

EN

ES

FR

DE

PT

IT

NL

SE

PL

EN

Controls

- 1 **USB** - Connects to your computer for firmware updates.
- 2 **Display Mode** - Choose between Needle or Strobe tuning modes for guitar (G) or bass (B).
- 3 **Display** - Pick one string for single-string tuning, or strum all of the strings for polyphonic tuning.
- 4 **Output**
- 5 **Footswitch** - Turns the tuner on and off. Press and hold the footswitch to toggle between standard and drop-D tuning.
- 6 **Power Output** - Supply power to other daisy-chained pedals.
- 7 **Power Input** - Connect a 9 V / >100 mA power supply.
- 8 **Tuning Mode** - Select standard tuning or one of several dropped tuning or capo modes.
- 9 **Ambilight Sensor** - Detects the strength of the surrounding light and automatically adjusts the display brightness.
- 10 **Input**

Switching between True Bypass and Buffered Bypass

Unscrew the back plate of the pedal and look for the two small DIP-switches in the upper left corner.

Switch configuration	Mode
Both switches set to the left	True Bypass
Top switch set to the right Lower switch set to the left	Buffered Bypass
Both switches set to the right	Buffered Bypass Display Always On

ES

Controles

- 1 **USB** - Se conecta a su computadora para obtener actualizaciones de firmware.
- 2 **Display Mode** - Elija entre los modos de afinación de aguja o estroboscópico para guitarra (G) o bajo (B).
- 3 **Display** - Elija una cuerda para la afinación de una sola cuerda o rasquee todas las cuerdas para una afinación polifónica.
- 4 **Output**
- 5 **Footswitch** - Enciende y apaga el afinador. Mantén pulsado el pedal para alternar entre afinación estándar y drop-D.
- 6 **Power Output** - Suministra energía a otros pedales conectados en cadena.
- 7 **Power Input** - Conecte una fuente de alimentación de 9 V / > 100 mA.
- 8 **Tuning Mode** - Seleccione la afinación estándar o uno de varios modos de afinación o cejilla.
- 9 **Ambilight Sensor** - Detecta la intensidad de la luz envolvente y ajusta automáticamente el brillo de la pantalla.
- 10 **Input**

Cambio entre True Bypass y Bypass con búfer

Desatornille la placa trasera del pedal y busque los dos pequeños interruptores DIP en la esquina superior izquierda.

Configuración del interruptor	Modo
Ambos interruptores colocados a la izquierda	Verdadero bypass
Interruptor superior colocado a la derecha Interruptor inferior colocado a la izquierda	Bypass con búfer
Ambos interruptores colocados a la derecha	Pantalla de derivación con búfer siempre encendida